

# WORKSTEAD

## Wall Lamp Portable

Assembly and mounting instructions



### General Notes

THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).

FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.

CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.

THIS PRODUCT IS RATED FOR ONE 75W MAX, E26 BULB.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### CAUTION




THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.

### WARNING

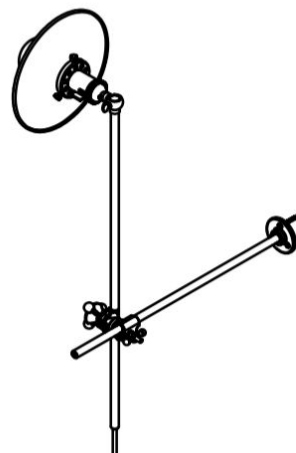
THIS FIXTURE USES A POLARIZED PLUG. DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.




### Included components

3	wood screws	
3	drywall anchors	
1	TALA Porcelain II bulb	

### Mounting Assembly

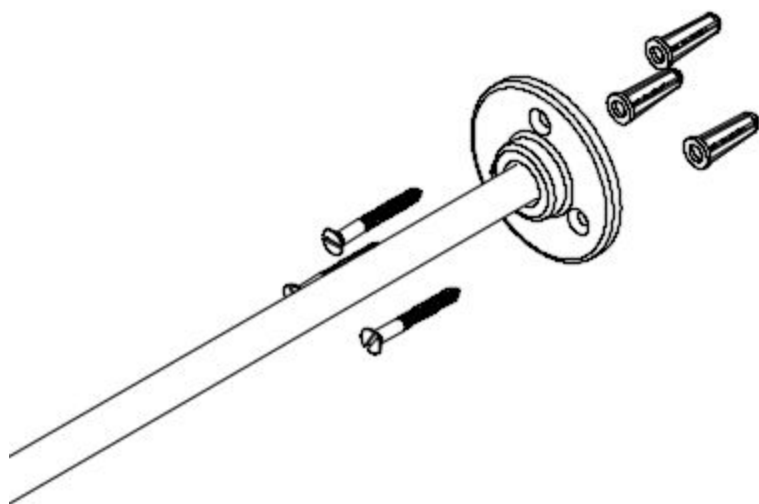

### Arm Installation

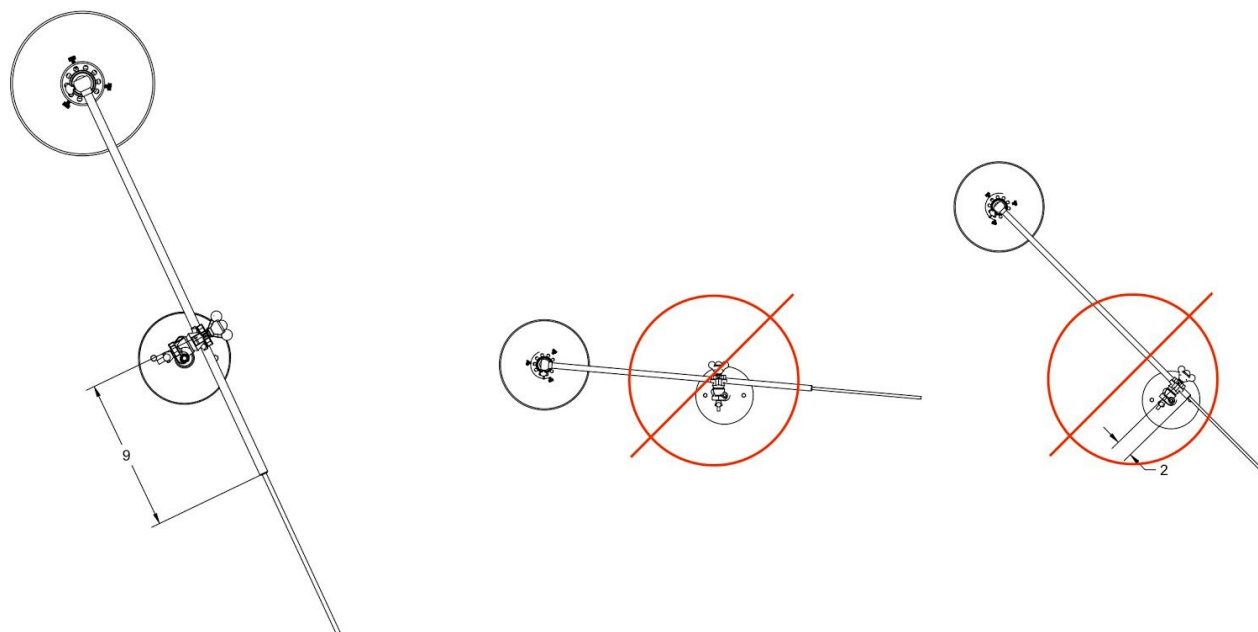



<b>Step 1</b>  Identify desired location for mounting on wall	<b>Step 2</b>  Install provided anchors, or anchors appropriate to wall material of comparable strength
<b>Step 3</b>  Mount fixture with provided wood screws	<b>Step 3</b>  Install shade and bulb, plug fixture in and turn switch on socket to ensure proper function. If further work is needed be sure to unplug fixture before proceeding.

### Electrical Configuration

FROM SUPPLY	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE TO LUMINAIRE GREEN WIRE	

# WORKSTEAD

## WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS

### GENERAL NOTES

THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.

THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).

FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE. CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.

THIS PRODUCT IS RATED FOR ONE 40W MAX, TYPE B BULB.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.  
CAUTION

### CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN. PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.  
WARNING

### WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

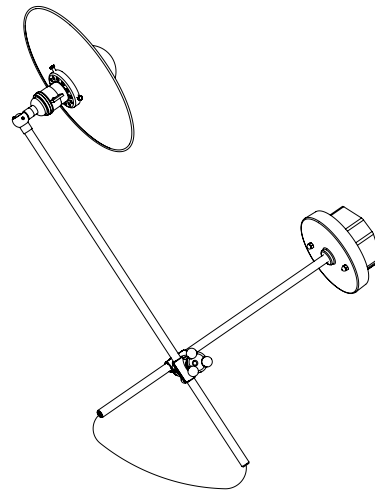
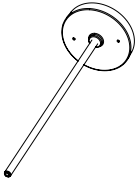








# WORKSTEAD

## WALL LAMP: HARDWIRED

### ASSEMBLY AND MOUNTING INSTRUCTIONS

#### COMPONENTS FOR INSTALLATION

MOUNTING PLATE	BACKPLATE WITH THREADED TUBE	UPPER ARM	SHADE
			
KNUCKLE	(X3) LIGHT BULB	(X2) WIRE NUTS	(X2) ACORN NUTS
			

# WORKSTEAD

## WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS


### MOUNTING INSTRUCTIONS

#### STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.


#### STEP 2

LOCATE JUNCTION BOX ON WALL. ATTACH MOUNTING PLATE TO THE JUNCTION BOX USING THE JUNCTION BOX SCREWS ENSURING THAT THE STUDS IN THE MOUNTING PLATE ARE SET LEVEL.

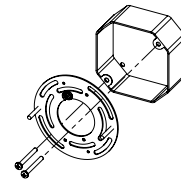


#### STEP 3

UNSCREW THE KNUCKLE COUNTER CLOCK-WISE AND SLIDE THE KNUCKLE ON TO THE THREADED TUBE. TIGHTEN THE KNOB CLOCK-WISE TO SECURE THE KNUCKLE TO THE THREADED TUBE.

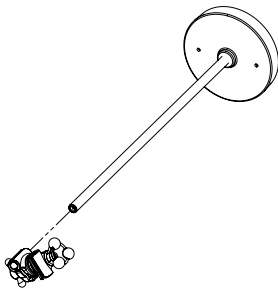

#### STEP 4

FEED THE WIRING FROM THE UPPER ARM THROUGH THE KNUCKLE AND THEN SLIDE THE UPPER ARM INTO THE KNUCKLE. TIGHTEN THE KNOBS CLOCK-WISE TO SECURE THE ARM IN THE KNUCKLE.

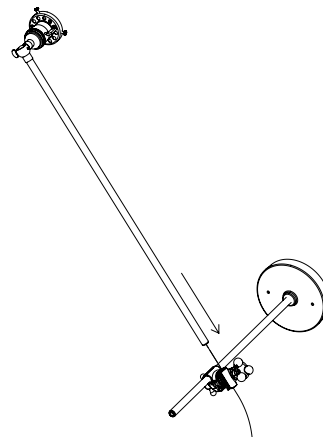

# WORKSTEAD

## WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS


### MOUNTING INSTRUCTIONS

#### STEP 5

FEED THE WIRING THROUGH THE THREADED TUBE AND BACKPLATE. USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

#### STEP 6

TUCK THE WIRING INTO THE JUNCTION BOX. CAREFULLY ALIGN THE TWO HOLES IN THE BACKPLATE WITH THE MOUNTING PLATE SCREWS AND THEN SLIP THE BACKPLATE OVER THE MOUNTING PLATE SCREWS. ATTACH AND TIGHTEN THE TWO ACORN NUTS TO THE MOUNTING PLATE SCREWS TO SECURE THE LIGHTING FIXTURE TO THE WALL.

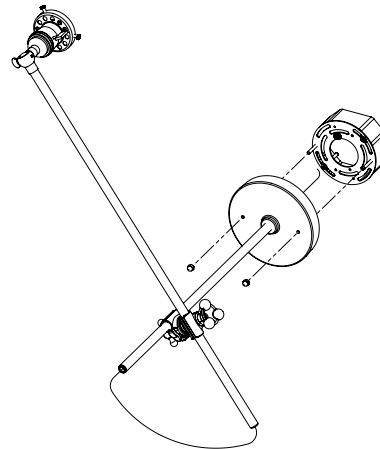


# WORKSTEAD

## WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS

### MOUNTING INSTRUCTIONS


#### STEP 7

INSTALL THE SHADE ON THE UPPER ARM. SECURE THE SHADE TO THE UPPER ARM BY TIGHTENING THE THREE SET SCREWS LOCATED IN THE SHADE COLLARS.

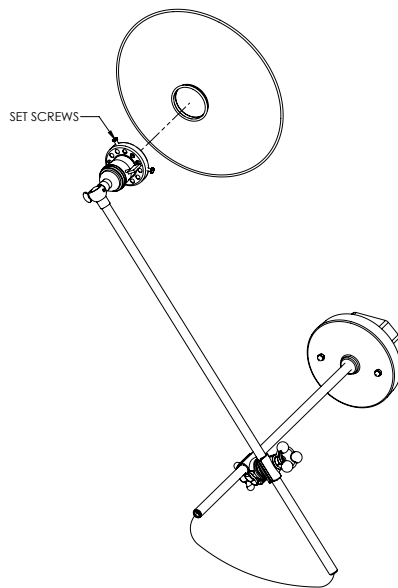

#### STEP 8

INSTALL THE LIGHT BULB IN THE SOCKET OF THE UPPER ARM.

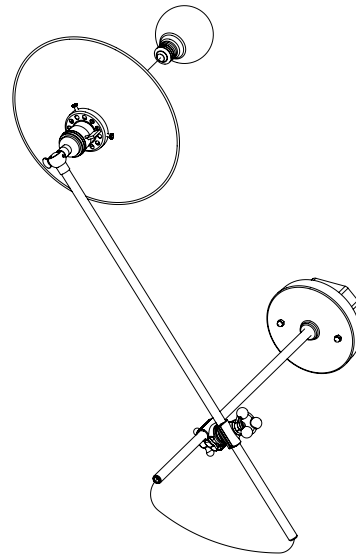

#### STEP 9

CONFIRM PROPER OPERATION OF THE LIGHT FIXTURE.