



General Notes

THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).

FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.

CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.

THIS PRODUCT IS RATED FOR ONE 75W MAX, E26 BULB.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

CAUTION



THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.

WARNING

THIS FIXTURE USES A POLARIZED PLUG. DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.

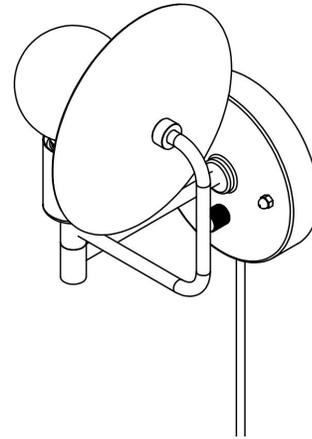


Included components

2	1" 8# wood screws	
2	Drywall anchors	
2	1" 8# x 32 machine bolts	
2	acorn nuts	
1	universal crossbar	
1	1/4 x 20 set screw	
1	TALA Porcelain II bulb	



Mounting Assembly

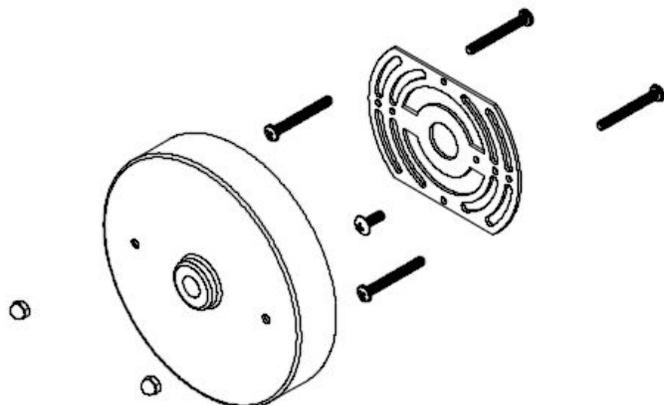

Step 1

Identify desired location for mounting on wall

Step 2

Install provided anchors, or anchors appropriate to wall material of comparable strength

Step 3

Thread 1" machine bolts through mounting plate until head is flush with plate. Secure mounting plate to anchors with machine bolts facing outwards.

Step 4

Carefully align the two holes in the canopy with the mounting plate screws and then slip the canopy over the mounting plate screws. Attach and tighten the two acorn nuts to the mounting plate screws to secure the lighting fixture to the wall.

Step 5

Slide collar on back of shade onto end of bent arm, secure with provided $\frac{1}{4}$ x 20 set screw using a flathead screwdriver.

Step 6

Plug fixture in and turn dimmer dial to ensure proper function. If further work is needed be sure to unplug fixture before proceeding.