

WORKSTEAD

INDUSTRIAL / BRASS CHANDELIER ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL NOTES

THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.

THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).

FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.

THIS PRODUCT IS RATED FOR ONE 40W MAX, TYPE B BULB.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN. PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
WARNING

WARNING


THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

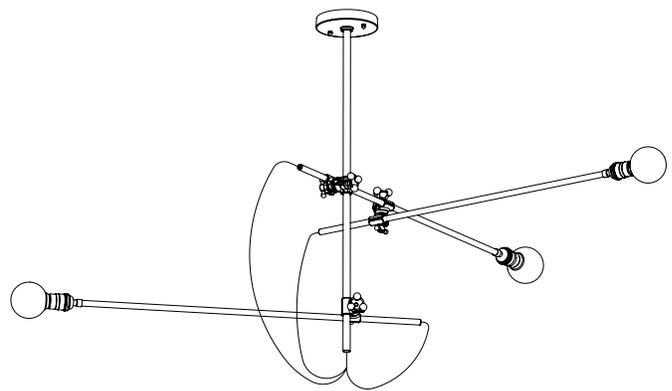

WORKSTEAD

INDUSTRIAL / BRASS CHANDELIER ASSEMBLY AND MOUNTING INSTRUCTIONS

COMPONENTS FOR INSTALLATION
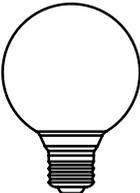
<p>MOUNTING PLATE</p> 	<p>CANOPY WITH DOWNROD</p> 	<p>(X3) ARM</p> 	<p>(X3) LIGHT BULB</p> 
<p>(X2) WIRE NUTS</p> 	<p>(X2) LARGE KNUCKLES</p> 	<p>(X2) SMALL KNUCKLES</p> 	<p>(X2) ACORN NUTS</p> 

WORKSTEAD

INDUSTRIAL / BRASS CHANDELIER ASSEMBLY AND MOUNTING INSTRUCTIONS


MOUNTING INSTRUCTIONS

STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.


STEP 2

LOCATE JUNCTION BOX IN THE CEILING. ATTACH THE MOUNTING PLATE TO THE JUNCTION BOX USING THE JUNCTION BOX SCREWS.




STEP 3

"ARM TO DOWNROD"
UNSCREW THE LARGE KNOB OF THE LARGE KNUCKLE COUNTER-CLOCKWISE AND SLIP OVER THE DOWNROD. SECURE THE KNUCKLE TO THE DOWNROD BY TIGHTENING THE LARGE KNOB CLOCKWISE.

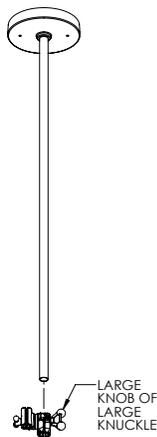

STEP 4

"ARM TO DOWNROD"
FEED THE WIRING FROM THE ARM THROUGH THE LARGE KNUCKLE AND THEN SLIDE THE ARM INTO THE KNUCKLE. TIGHTEN THE SMALL KNOB CLOCKWISE TO SECURE THE ARM IN THE KNUCKLE.



WORKSTEAD


INDUSTRIAL / BRASS CHANDELIER ASSEMBLY AND MOUNTING INSTRUCTIONS

MOUNTING INSTRUCTIONS

STEP 5

"ARM TO ARM"


UNSCREW THE LARGE KNOB OF THE SMALL KNUCKLE COUNTER-CLOCKWISE AND SLIP OVER THE FIRST ARM. SECURE THE KNUCKLE TO THE FIRST ARM BY TIGHTENING THE LARGE KNOB CLOCKWISE.

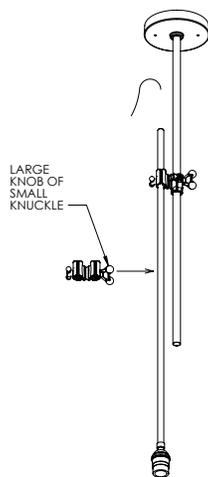

STEP 6

"ARM TO ARM"

FEED THE WIRING FROM THE ARM THROUGH THE SMALL KNUCKLE AND THEN SLIDE THE ARM INTO THE KNUCKLE. TIGHTEN THE SMALL KNOB CLOCKWISE TO SECURE THE ARM IN THE KNUCKLE.



STEP 7

ATTACH REMAINING TWO ARMS (MULTIPLE CONFIGURATIONS POSSIBLE):

- IF ATTACHING "ARM TO DOWNROD", REPEAT STEP 3 AND STEP 4
- IF ATTACHING "ARM TO ARM", REPEAT STEP 5 AND 6

NOTE: THERE WILL BE ONE EXTRA KNUCKLE REMAINING

STEP 8

FEED THE WIRING FROM THE THREE ARMS THROUGH THE DOWN-ROD AND OUT THE TOP OF THE CANOPY.

WORKSTEAD

INDUSTRIAL / BRASS CHANDELIER ASSEMBLY AND MOUNTING INSTRUCTIONS


MOUNTING INSTRUCTIONS

STEP 9

USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

STEP 10

TUCK THE WIRING INTO THE JUNCTION BOX. CAREFULLY ALIGN THE TWO HOLES IN THE CANOPY WITH THE MOUNTING PLATE SCREWS AND THEN SLIP THE CANOPY OVER THE MOUNTING PLATE SCREWS. ATTACH AND TIGHTEN THE TWO ACORN NUTS TO THE MOUNTING PLATE SCREWS TO SECURE THE LIGHTING FIXTURE TO THE CEILING.




WORKSTEAD

INDUSTRIAL / BRASS CHANDELIER ASSEMBLY AND MOUNTING INSTRUCTIONS

MOUNTING INSTRUCTIONS

STEP 11


SLIGHTLY LOOSEN KNOBS OF KNUCKLES BY TURNING COUNTER-CLOCKWISE AND ROTATE ARMS TO DESIRED POSITIONS. TIGHTEN KNUCKLES CLOCKWISE TO SECURE ARMS IN THE DESIRED POSITION.

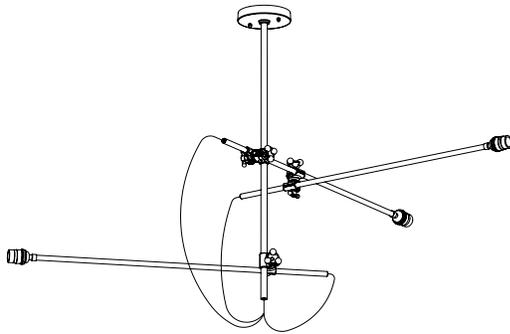

STEP 12

INSTALL THE THREE LIGHT BULBS IN THE SOCKETS.

STEP 12

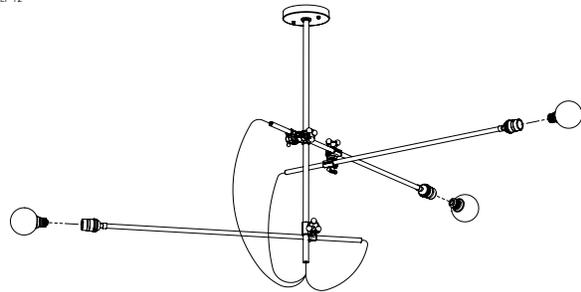

STEP 13

RESTORE POWER TO THE CIRCUIT. CONFIRM PROPER OPERATION OF THE LIGHTING FIXTURE.