

WORKSTEAD

WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL NOTES

THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.

THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).

FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE. CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.

THIS PRODUCT IS RATED FOR ONE 40W MAX, TYPE B BULB.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.
CAUTION

CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN. PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
WARNING

WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.


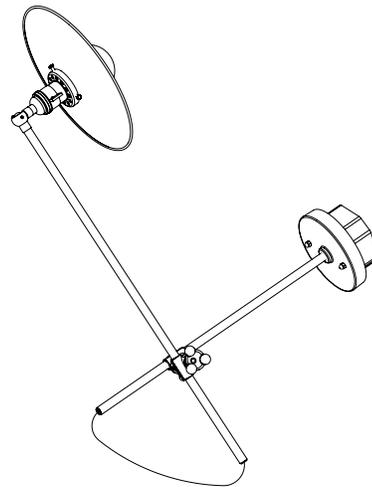


WORKSTEAD

WALL LAMP: HARDWIRED

ASSEMBLY AND MOUNTING INSTRUCTIONS

COMPONENTS FOR INSTALLATION
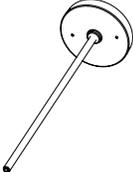
<p>MOUNTING PLATE</p> 	<p>BACKPLATE WITH THREADED TUBE</p> 	<p>UPPER ARM</p> 	<p>SHADE</p> 
<p>KNUCKLE</p> 	<p>(X3) LIGHT BULB</p> 	<p>(X2) WIRE NUTS</p> 	<p>(X2) ACORN NUTS</p> 

WORKSTEAD

WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS


MOUNTING INSTRUCTIONS

STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.

STEP 2

LOCATE JUNCTION BOX ON WALL. ATTACH MOUNTING PLATE TO THE JUNCTION BOX USING THE JUNCTION BOX SCREWS ENSURING THAT THE STUDS IN THE MOUNTING PLATE ARE SET LEVEL.

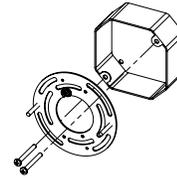


STEP 3

UNSCREW THE KNUCKLE COUNTER CLOCK-WISE AND SLIDE THE KNUCKLE ON TO THE THREADED TUBE. TIGHTEN THE KNOB CLOCK-WISE TO SECURE THE KNUCKLE TO THE THREADED TUBE.

STEP 4

FEED THE WIRING FROM THE UPPER ARM THROUGH THE KNUCKLE AND THEN SLIDE THE UPPER ARM INTO THE KNUCKLE. TIGHTEN THE KNOBS CLOCK-WISE TO SECURE THE ARM IN THE KNUCKLE.

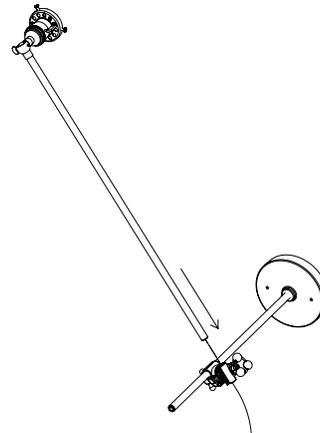

WORKSTEAD

WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS


MOUNTING INSTRUCTIONS

STEP 5

FEED THE WIRING THROUGH THE THREADED TUBE AND BACKPLATE. USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

STEP 6

TUCK THE WIRING INTO THE JUNCTION BOX. CAREFULLY ALIGN THE TWO HOLES IN THE BACKPLATE WITH THE MOUNTING PLATE SCREWS AND THEN SLIP THE BACKPLATE OVER THE MOUNTING PLATE SCREWS. ATTACH AND TIGHTEN THE TWO ACORN NUTS TO THE MOUNTING PLATE SCREWS TO SECURE THE LIGHTING FIXTURE TO THE WALL.

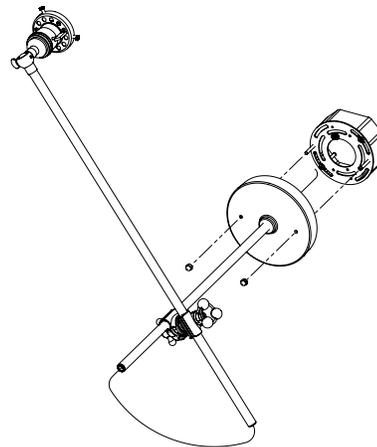


WORKSTEAD

WALL LAMP: HARDWIRED ASSEMBLY AND MOUNTING INSTRUCTIONS

MOUNTING INSTRUCTIONS


STEP 7

INSTALL THE SHADE ON THE UPPER ARM. SECURE THE SHADE TO THE UPPER ARM BY TIGHTENING THE THREE SET SCREWS LOCATED IN THE SHADE COLLARS.

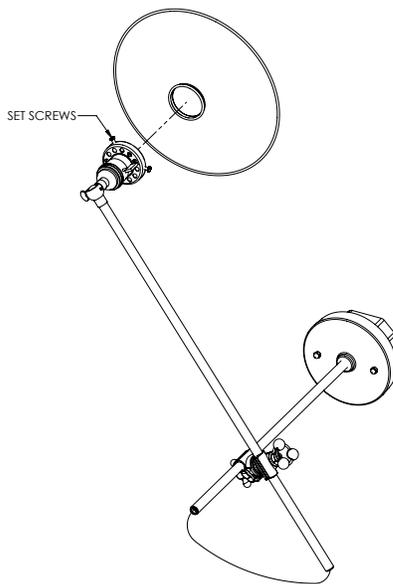

STEP 8

INSTALL THE LIGHT BULB IN THE SOCKET OF THE UPPER ARM.

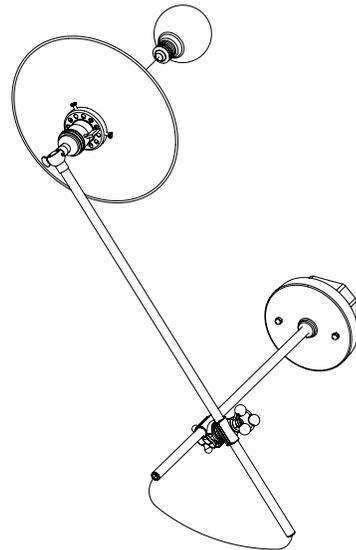

STEP 9

CONFIRM PROPER OPERATION OF THE LIGHT FIXTURE.